ASSEMBLY & INSTALLATION GUIDE

RESEARCH Bedytender

APPLICATION

Deep Bed Truck (F-150 & Tundra) Large Truck, Universal (Full-size trucks, wide beds) Small Truck, Universal (Mid-size and small trucks, small beds)

PART

74813-00A (Silver) 74814-00A (Silver) 74811-00A (Silver) 74813-01A(Black) 74814-01A(Black) 74811-01A(Black)

INSTALLATION TIME 1 Hour

SKILL LEVEL

1= Easv

TOOLS REQUIRED

Phillips screw driver

Torx T-25 driver

Power drill

9/64" drill bit


Center punch

Soapy Water

Supplied templates

WARRANTY

3-Year Limited Warranty

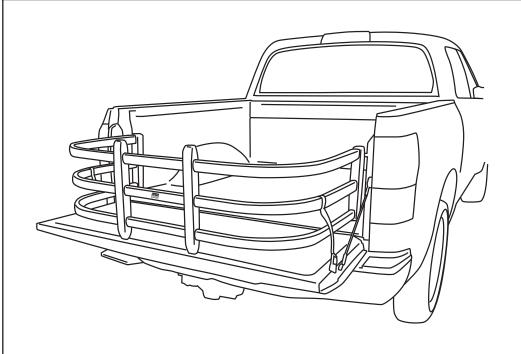


BEDXTENDER HD[™] shown assembled and installed on truck.

Remove contents from box and check for damage. Verify all parts against parts list. Read and understand instructions completely before attempting assembly and installation.


Invented, engineered and manufactured exclusively by AMP Research in the USA. May be covered by one of the following patents:

 $5,700,047;\ 6,113,173;\ 6,402,215;\ 6,805,392;\ 7,063,366;\ 7,393,035;\ 7,654,598;\ 7,681,935;\ 7,841,638$

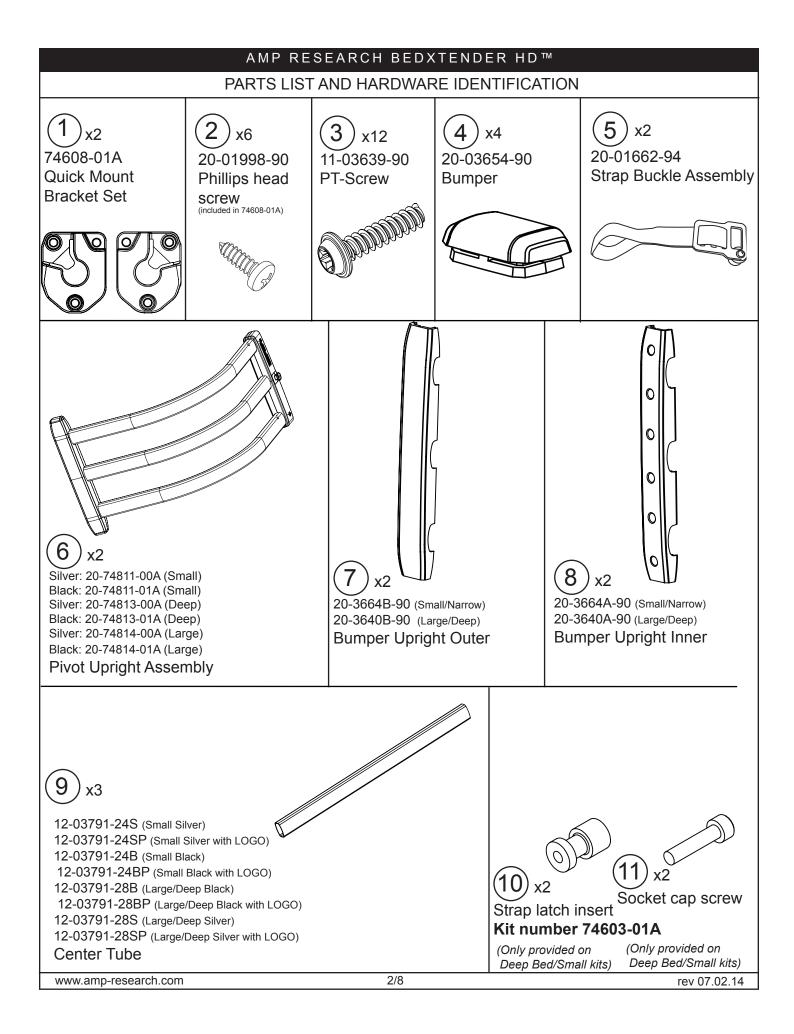

AMP RESEARCH BEDXTENDER HD™ ADDITIONAL MOUNTING KITS			
	DESCRIPTION	APPLICATION	PART #
	No-Drill Mounting Bracket Kit – Ford F-Series OPTIONAL	2004+ F-150 2008+ F-250 2008+ F-350	10-74602-01A
	L-Bracket Mounting Kit REQUIRED ON SOME APPLICATIONS TO COMPLETE INSTALLATION	GM S-Series Mazda B-Series Nissan Pickup Toyota Pickup (Pre 2005 models)	10-74601-01A
www.amp-research.com	3/8		rev 07.02.14

AMP RESEARCH BEDXTENDER HD™ UNIVERSAL MOUNTING BRACKET INSTALLATION

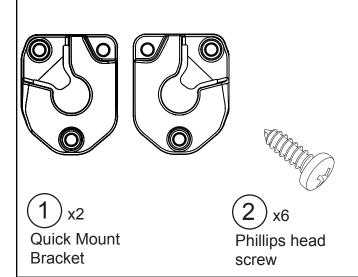

2

Cut out supplied template and tape to the D-pillar as shown. Using a center punch, mark holes as specified by the template.




Using a power drill and 9/64" drill bit, drill through the sheet metal. If equipped with a bedliner, drill through bedliner.

Fasten mounting brackets using the supplied self-tapping Phillips screws and torque to 30 in. Ibs. If equipped with a bedliner, install mounting brackets over bedliner.

NOTE: If bedliner has contours that may prohibit a flat, solid mounting surface, cut out a rectangular section to clear the bracket and mount the bracket directly to the metal D-pillar.

3

AMP RESEARCH BEDXTENDER HD™

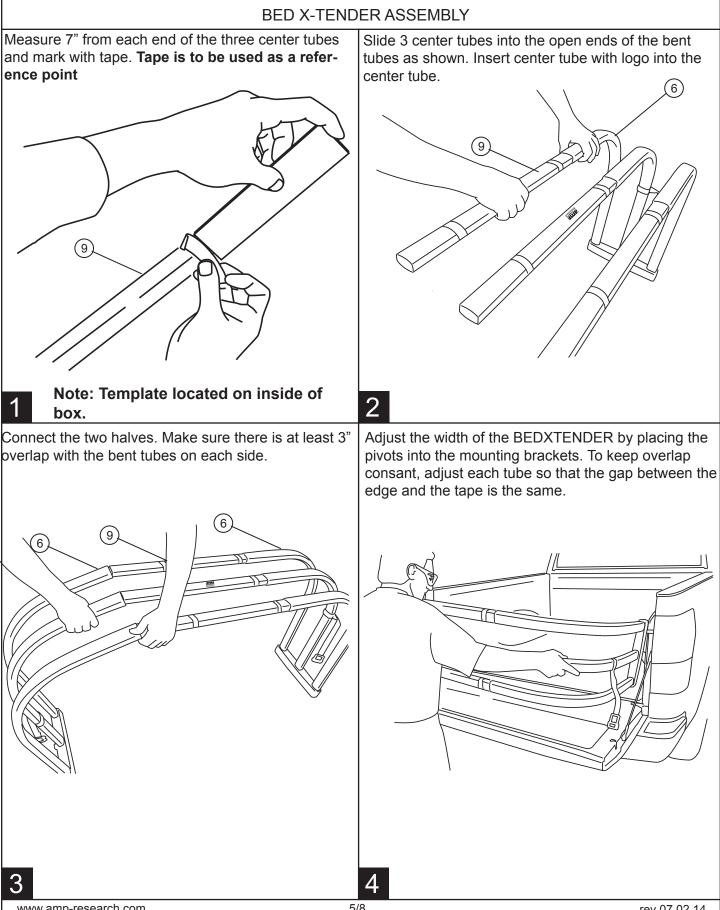


AMP RESEARCH BEDXTENDER HD $^{\mathrm{M}}$


BED X-TENDER ASSEMBLY - CONTINUED

(7

Attach plastic upright around the tube juncture, placing rubber bumpers into the two ends of the upright.

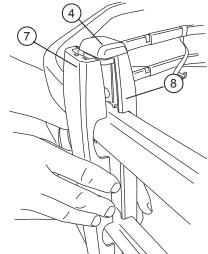


7

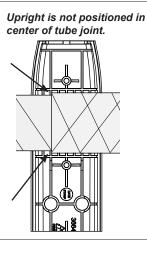



NOTE: The inside of the upright is stepped to fit correctly around the small and large diameter tubes. Tighten PT-Screws using a T-25 torx driver, starting in the middle of each upright, then the outer screws and lastly the remaining two to evenly tighten.

NOTE: Do not over tighten as this may strip out. Fastener will reach a noticable stopping point.

Adjust Strap Buckles to lock into the tailgate when BEDXTENDER is deployed. Your assembly is now complete.

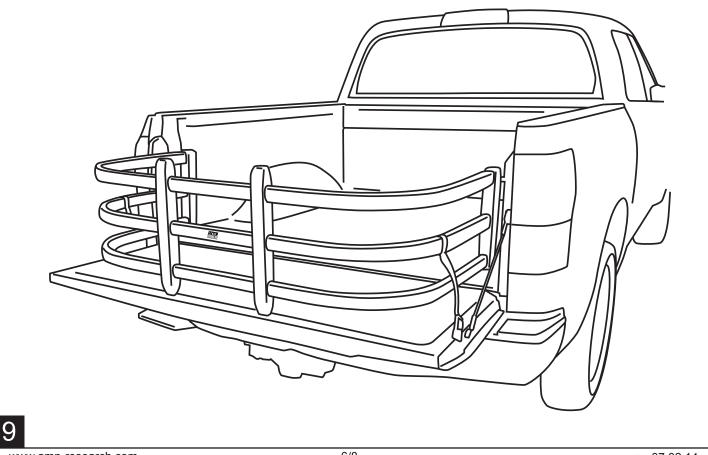

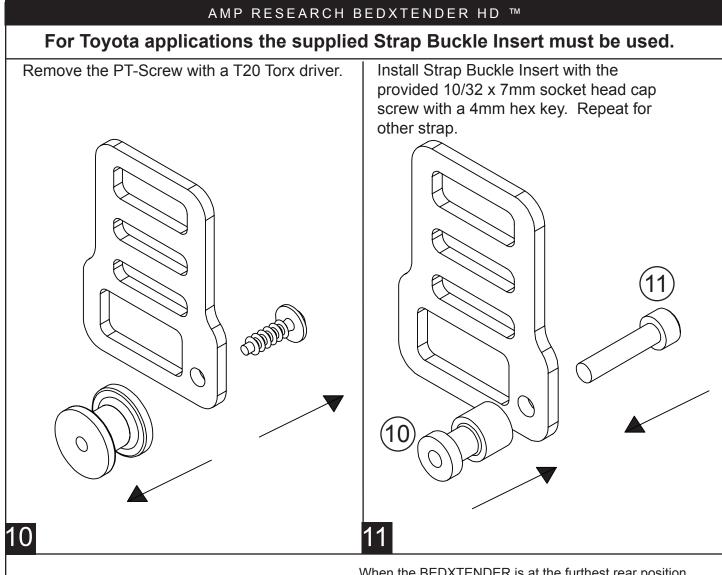

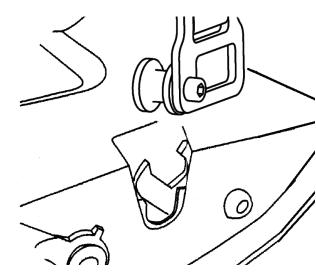

When the BEDXTENDER is at the furthest rear position, push down on the buckle to insert into tailgate latch. Tighten straps. To release, pull tailgate handle.

NOTE: Ensure that buckles are properly inserted into latches by pulling on the straps after both buckles have been inserted.

AMP RESERRCH BedXTenderHD[™]

Congratulations on your purchase of the AMP Research BEDXTENDER HD. Here's what you need know...



BEDXTENDER HD™ OPERATION

With the tailgate open, place BEDXTENDER pivot pins into the left and right mounting brackets. Rotate to 45 until it drops into place, then lower onto the open tailgate.



Flip BEDXTENDER out to contain cargo in the truck bed when the tailgate is open. CAUTION! 200lb maximum load on open tailgate. Always distribute cargo evenly and properly secure inside bed. Do not secure cargo to the BEDXTENDER or the tailgate.



Before driving, secure BEDXTENDER by locking the provided strap buckles into the truck's tailgate latches. To release, pull tailgate handle. NOTE: Ensure that both buckles are properly locked into the latches by pulling up on each strap.



Flip BEDXTENDER forward and close the tailgate to keep smaller cargo safe and organized.

AMP RESEARCH LIMITED WARRANTY

AMP RESEARCH warrants this product to be free from defects in material and workmanship for THREE (3) YEARS FROM DATE OF PURCHASE, provided there has been normal use and proper maintenance. This warranty applies to the original purchaser only. All remedies under this warranty are limited to the repair replacement of the product itself, or the repair or replacement of any component part thereof, found by the factory to be defective within the time period specified. The decision to repair or replace is wholly within the discretion of the manufacturer.

This warranty specifically excludes labor. If you have a warranty claim, first you must call our factory at the number below for instructions. You must retain proof of purchase and submit a copy with any items returned for warranty work. Upon completion of warranty work, if any, we will return the repaired or replaced item or items to you freight prepaid. Damage to our products caused by accidents, fire, vandalism, negligence, misinstallation, misuse, Acts of God, or by defective parts not manufactured by us, is not covered under this warranty.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE CREATED HEREBY ARE LIMITED IN DURATION TO THE SAME DURATION AND SCOPE AS THE EXPRESS WRITTEN WARRANTY. OUR COMPANY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

FOR WARRANTY ISSUES WITH THIS PRODUCT PLEASE CALL AMP RESEARCH CUSTOMER SERVICE 1-888-983-2204

WARNING

Be sure to read and precisely follow the provided instructions when installing this product. Failure to do so could place the vehicle occupants in a potentially dangerous situation. After installing or reinstalling, re-check to insure that the product is properly installed.

